

Fork cleaner

Detailed instructions

1. Clean the entire area around the dust pan.
2. Use a screwdriver to remove the dust seal so Seal Mate can repair the fork seal.
3. Clean the entire area around the oil seal. (Contact cleaner, toothbrush, towel).
4. Slide the dust seal down the fork tube to allow Seal Mate to repair the fork seal.
5. Carefully insert the rear end of the Seal Mate between the seal and the fork tube. It should be inserted approximately 1/2" deep.
6. Insert the rear end of the Seal Mate into the fork tube, then rotate the tool so that it is parallel to the fork tube.
7. Carefully rotate the sealant around the fork tube, making sure the BACK END is the leading edge. Rotate the Seal Mate tool around the oil seal to remove dirt and debris from the seal. Once fully rotated, continue rotating the SEAL MATE tool while removing it.
8. Wipe the entire area (fork tube and seal). Grasp the front brake and PRESS (pump) the fork several times.
9. Wipe the entire area (fork tube and seal). Pump again. Check the fork tube for excess oil. If excess oil is present, repeat steps 7-10.
10. Slide the dust seal back up into the fork Clean and return the dust seal to its original position.

A simple and easy tool to repair leaking fork seals.

Maintenance:

Periodically check that the valve is securely fastened.

Dispose of the product in an environmentally friendly manner at the end of its service life.

Made in the USA

Importeur: MEFO SPORT CENTRUM s.r.o., Jinín 60, Strakonice 38601, www.mefo.cz